

## Generel opsætning af Fax videresend på Develop / KM maskiner

### Problemstilling.

- Når der modtages fax vil flere gerne at den videresendes til anden fax eller e-mail adresse..

### Løsningsforslag.

- Se nedenstående vejledning

#### To display:

[Utility]

└ [Administrator Settings]

└ [Fax Settings]

└ [Function Settings]

└ [Forward TX Setting]

Configure the settings for using the Forward TX function.

Forward TX transfers a received fax to a pre-specified destination.

Settings	Description
[Yes]/[No]	Select whether to use the Forward TX function. [No] is specified by default.
[Output Method]	Select whether to print a received fax on this machine when forwarding it. <input checked="" type="checkbox"/> [Forward & Print]: A received fax is forwarded and printed on this machine. <input checked="" type="checkbox"/> [Forward & Print (If TX Fails)]: A received fax is printed on this machine if forwarding fails.
[Forward Dest.]	Specify a forwarding destination for a received fax. Directly enter the appropriate fax number using the <b>Keypad</b> or tap [Select from Address Book] and select one of the destinations registered on this machine. You can specify [File Type] and convert a fax into a file except when the destination is a fax.
[Select Line]	If two lines are used, select the line used to send a fax. If [No Selection] is selected, either line, whichever is not busy, is used for transmission. [No Selection] is selected by default.